

Cambridge Public Library Mobile Hotspots

Funding for this service has been generously provided by the Friends of the Cambridge Public Library and the City of Cambridge

A Mobile Hotspot is a device to provide wireless internet access (WiFi). It creates a WiFi network that you can connect to from a laptop or other device.

Using the Mobile Hotspot

- 1. Turn on the hotspot by pressing the power key for 3 seconds. (If the device does not turn on, you may need to charge the hotspot with the power cord provided.)
- 2. Wait about 10 seconds for the hotspot to be ready to use. It will display "Welcome!" as it is powering up, then "T-Mobile" when it is ready to use.
- 3. Go to the network WiFi settings on your device.
- 4. Select WiFi name: CPL Hotspot
- 5. Enter WiFi password: welcome! (note the exclamation point)
- 6. To turn off the hotspot when you are finished using it, hold down the power key for 3 seconds. It will display "Goodbye" before powering down.

Return the Hotspot

Return your hotspot directly to a Library staff member at the location you borrowed it from. Hotspots should not be returned via the book drops.

Please return the hotspot by the due date. Items not returned on time will be remotely disabled.

Replacement costs: Hotspot \$70. Case \$20. Power Cord: \$10 Total: \$100

If you have difficulties using this hotspot, please call or visit the Library.

More information on events and services cambridgepubliclibrary.org